

SAFE WORKING WITH CORDLESS PRUNING SHEARS



Risks




Physical injury (risk of cuts and amputation), cutting fingers or hands



Eye injury caused by flying debris



Electrocution (caused by rain or (electric shock)

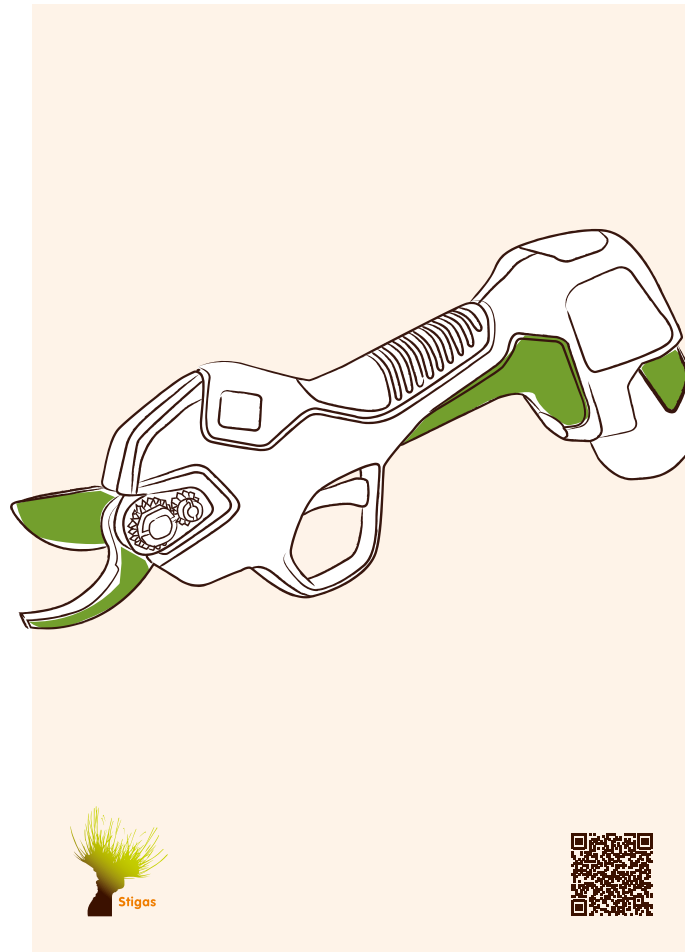

PPE for safety



Tight-fitting clothing with long sleeves, sturdy overalls or long trousers



Safety shoes with good grip



Flexible work gloves



Safety goggles to protect against flying debris



Measures

1. Before starting work



Never start without instructions



Base the type of cordless pruning shears on the type of work



Check that the pruning shears are safe and work properly



Call in the event of emergency or breakdown

2. Performing work



Don't use the pruning shears when it rains or in damp conditions



Keep your free hand at least 40cm away from the blade



Don't reach to branches, make sure you maintain a stable posture



Don't work above shoulder height



Don't rush; take regular breaks



Vary your tasks



Keep the blade closed when walking



Switch off the shears when you are not using them



Don't carry on working when the pruning shears are out of order

3. After completing work



Report damage and defects



Remove the battery or disconnect the power cable



Store the cordless pruning shears in the blade guard



Maintain, sharpen and lubricate the shears



Make sure to use, store and charge the battery safely